


FAST-PAD INSTALLATION


1

Open zipper, install rebar grid.

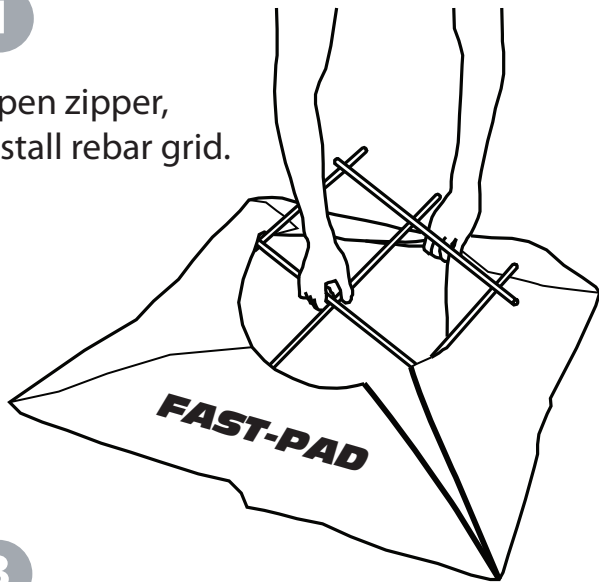



2

Position Fast-Pad. Drive stake through center to hold in position. Mark desired concrete height on stake.

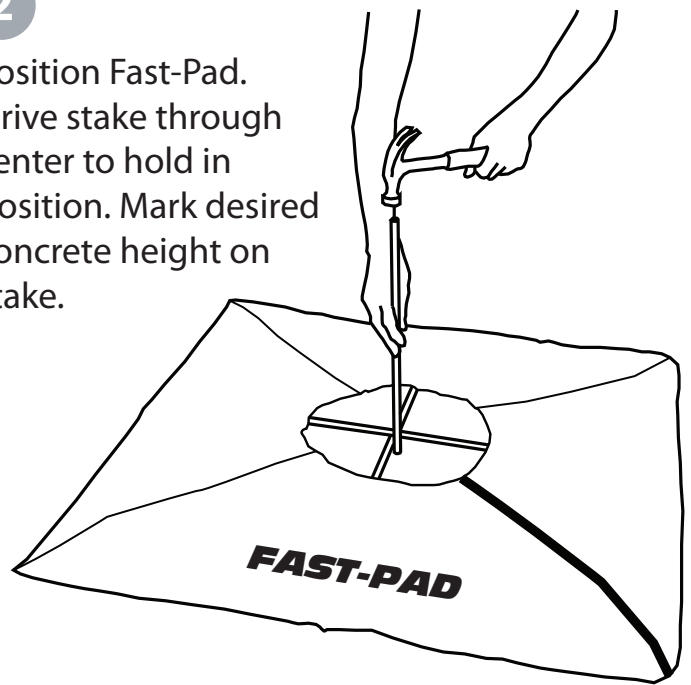

3


Place pump hose to the bottom of the bag. It is important to 'blow-up' the bag to achieve the desired height.

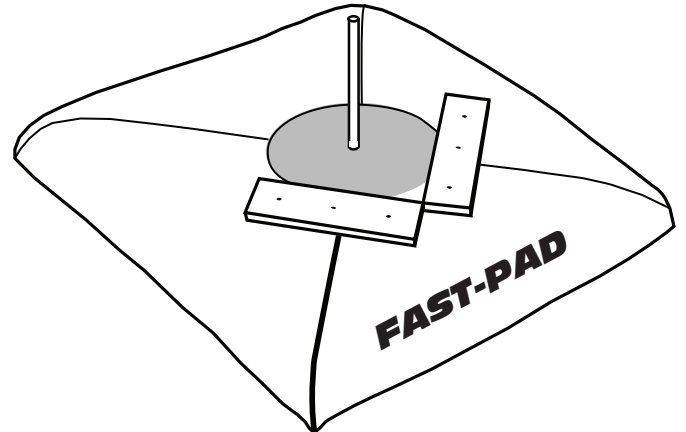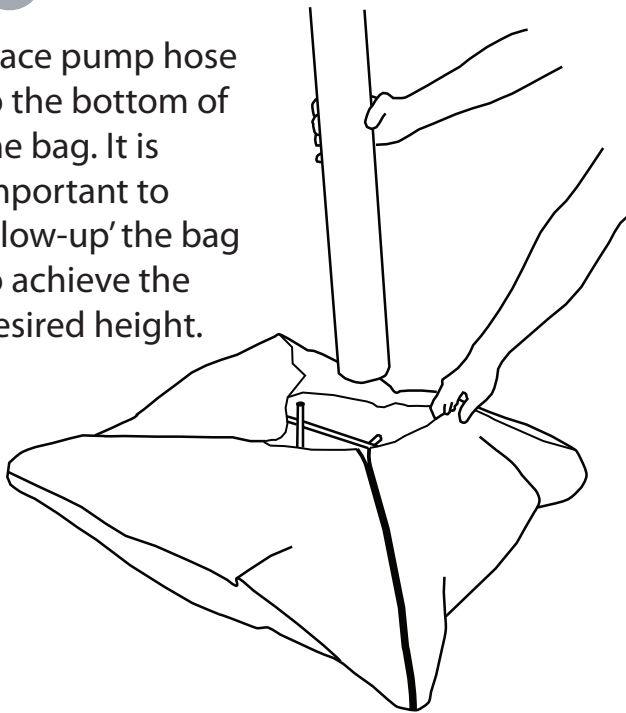

Short lengths of dimensional lumber nailed into green concrete are used to affix column forms.

Fast-Tube Monopour

Setup a batterboard in the correct position to support the pairs of 2x4s of the Fast-Tube. Fill Fast-Pad first, then 12" of Fast-Tube. After the concrete has gone 'off', complete the fill.

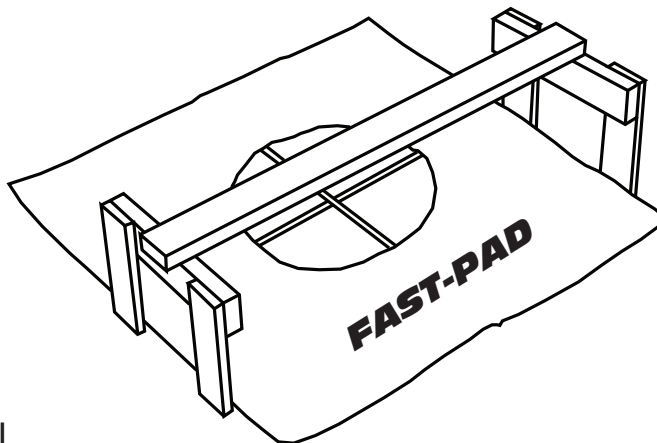

FAST-PAD SIZES

Length	Width	Height
24	24	8
30	30	10
36	36	12

FAB-FORM.com
(888) 303-3278



@fabformindustries